

GPSMAP[®] 695/696

Portable Aviation Receiver
Quick Reference Guide



GARMIN[®]

Copyright © 2009, 2012 Garmin Ltd. or its subsidiaries. All rights reserved.

This manual reflects the operation of System Software version 0004.90 or later. Some differences in operation may be observed when comparing the information in this manual to earlier or later software versions.

Garmin International, Inc., 1200 East 151st Street, Olathe, Kansas 66062, U.S.A.
Tel: 913/397.8200 Fax: 913/397.8282

Garmin AT, Inc., 2345 Turner Road SE, Salem, OR 97302, U.S.A.
Tel: 503/391.3411 Fax 503/364.2138

Garmin (Europe) Ltd, Liberty House, Bulls Copse Road, Hounslow Business Park,
Southampton, SO40 9RB, U.K.
Tel: 44/0870.8501241 Fax: 44/0870.8501251

Garmin Corporation, No. 68, Jangshu 2nd Road, Shijr, Taipei County, Taiwan
Tel: 886/02.2642.9199 Fax: 886/02.2642.9099

Web Site Address: www.garmin.com

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin®, GPSMAP®, FliteCharts® and SafeTaxi® are registered trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Jeppesen® is a registered trademark of Jeppesen, Inc.

NavData® is a trademark of Jeppesen, Inc.

AC-U-KWIK® is a registered trademark of Penton Business Media, Inc.

SiriusXM Satellite Radio is provided by of SiriusXM Satellite Radio, Inc.

SiriusXM Weather is provided by of SiriusXM Satellite Radio, Inc



Part Number	Change Summary
190-00959-00	Initial release

Rev	Date	Description
C	November, 2008	Production Release
D	February, 2012	<p>System Software Version 2.00 - 2.20 changes:</p> <ul style="list-style-type: none"> Added separate leg and cumulative distance, ETE, and fuel fields to the flight plan pages. <p>System Software Version 2.20-2.30 changes:</p> <ul style="list-style-type: none"> Added indication of airport CTAF frequencies to WPT page. <p>System Software Version 2.70-2.80 changes:</p> <ul style="list-style-type: none"> Added display of plain-language PIREP text. Added display of VOR radials when airway is highlighted. Added display of country when reviewing a user waypoint. Added sea surface temperature data. Added display of parachute jumping area. <p>System Software Version 2.90-3.00:</p> <ul style="list-style-type: none"> Added daylight savings time information display on Airport Waypoint page. <p>System Software Version 3.10-3.20 changes:</p> <ul style="list-style-type: none"> FlightCharts are no longer disabled after fade date. Added ability to import/export flight data via datacard. Added ability to highlight multiple weather objects using map cursor. Added XM page menu option for selecting a specific channel number. Added nearest airport page softkeys for toggling on/off private airports and heliports. Added TIS traffic data status indicator to the Map Page. <p>System Software Version 3.30-4.00 changes:</p> <ul style="list-style-type: none"> Added user-created checklists. Added support to export user waypoints and track logs to SD card. Added support for ChartView and geo-referenced FlightCharts. <p>System Software Version 4.20-4.30 changes:</p> <ul style="list-style-type: none"> Added SiriusXM warning text. Added menu options to WPT page for viewing departure and destination airports. Added displaced runway threshold distance on airport review page. Added suggested indicated altitude on E6B page.

		<p>System Software Version 4.40-4.50 changes:</p> <ul style="list-style-type: none"> • Added AC-U-KWIK airport data support. <p>System Software Version 4.70-4.80 changes:</p> <ul style="list-style-type: none"> • Added display setup option to show/hide aircraft position on maps and charts <p>System Software Version 4.80-4.90 changes:</p> <ul style="list-style-type: none"> • Added configurable data fields to display current climb gradient in percent or altitude gain per nautical mile. • Added runway number labels to runway extension lines on map. • Added Map Setup page items for adjusting visibility of water labels, park and land cover areas, runway numbers, and runway extension lines. • Added separate control for speed and distance units. • Added custom waypoint symbols support. • Changed screenshot utility to be activated when Menu key is pressed and held. • Changed XTK data fields display to more closely resemble G3X presentation. <p>Other changes:</p> <ul style="list-style-type: none"> • Changed XM to SiriusXM throughout. • Added TRAFFIC Softkey to Map Page Softkeys. • Added AOPA/DIRECTORY Softkey update info. • Added Terrain Page Softkeys. • Added Info Page Softkey. • Added Active Flight Plan Page Softkeys. • Added Flight Plan List Page Softkeys. • Added VNAV Page Softkeys. • Added Nearest Page Softkeys. • Updated AIRMETS and SIGMETS • Added PIREP info. • Added Turbulence Forecast info. • Added Icing Forecast info. • Updated Chartview and FliteChart info. • Updated AOPA Airport Directory to just Airport Directory where applicable. • Updated System Messages. • Updated Data Field Options. • Updated database information.
--	--	---


Blank Page

Overview	1
Softkeys	3
MAP Page Softkeys	3
Waypoint Page Softkeys.....	4
Weather Page Softkeys (GPSMAP 696 ONLY)	4
SiriusXM Audio Page Softkeys (GPSMAP 696 ONLY)	5
Data Entry	6
Menus	6
Pages	7
GPS Navigation	9
Panel	9
Waypoint Page	10
Nearest Pages	10
User Waypoints	11
Direct-to	12
Flight Planning	13
Flight Plan Creation	13
Flight Plan Storage	13
Flight Plan Activation	14
Adjusting Fuel Flow	15
Inverting a Flight Plan	15
Selecting an approach	15
Activating Vectors-to-final	16
Hazard Avoidance	17
SiriusXM Weather (GPSMAP 696 ONLY)	17
Terrain	18
Traffic Information Service (TIS)	19
Additional Features	21
SafeTaxi	21
ChartView (Optional)	21
FliteCharts	22
Airport Directory Data	23
Messages & Alerts	25
System messages	25
Airspace Messages.....	27
Aural Alerts.....	27


Utilities..... 29

- Flight Log**.....29
- Track Log**.....29
- E6B Calculator**30
- Aircraft Profile**.....30
- Weight & Balance**.....31
- Proximity Waypoints**.....31

OVERVIEW

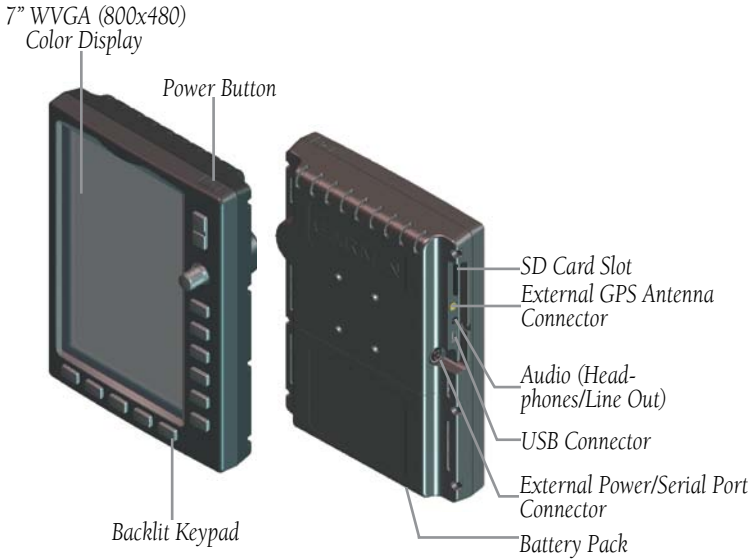

Unit Overview

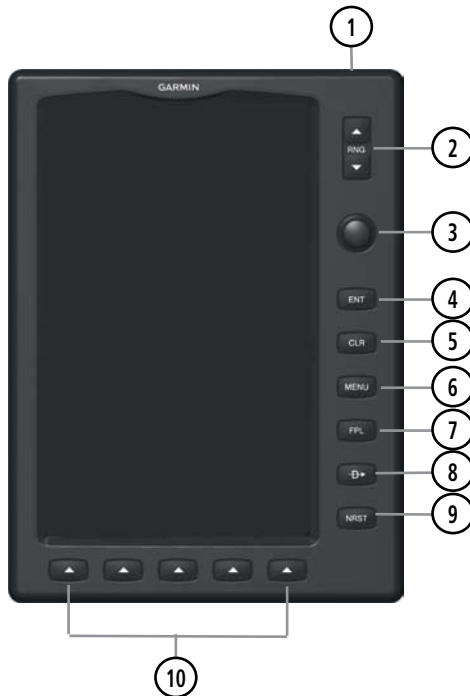

- ① **Power Button** Press and hold to turn the unit on or off
With the unit on, press to adjust the backlight and volume
- ② **RNG Key** Press to increase or decrease the viewing range of the map
- ③ **FMS Joystick** Press the **FMS** Joystick to toggle input focus between user interaction with the current page and the page navigation bar
Turn the **FMS** Joystick clockwise to access a dropdown menu
Turn the **FMS** Joystick to change the selected value within the highlighted field
Move the **FMS** Joystick to highlight fields or move the map pointer when interacting with the page
- ④ **ENT Key** Press to confirm menu selection or data entry
Press to acknowledge messages
Press and hold to mark a waypoint
- ⑤ **CLR Key** Press to cancel an entry, revert to the previous value in a data entry field, or remove menus
Press and hold to return to the default page
- ⑥ **MENU Key** Press once to view the Page Menu
Press twice to view the Main Menu
Press a third time to clear the Main Menu
- ⑦ **FPL Key** Press to display the Flight Plan Page
Press a second time to remove the Flight Plan Page
- ⑧ **Direct-To Key** Press to activate the Direct-To function, enter a destination waypoint, and establish a direct course to the selected destination
- ⑨ **NRST Key** Press to display the Nearest Page for viewing the nearest airports, weather (696 ONLY), Cities, intersections, NDBs, VORs, waypoints, frequencies, and airspaces
- ⑩ **Softkey Selection Keys** Press to select the softkey shown above the bezel key on the unit

SOFTKEYS




Softkeys (WPT Page)

MAP PAGE SOFTKEYS



- MAP Enables second-level Map Page softkeys
- TERRAIN Displays/removes terrain awareness information
- WEATHER Displays/removes weather information
- TRAFFIC Displays/removes traffic information
- PANEL Displays/removes the Panel

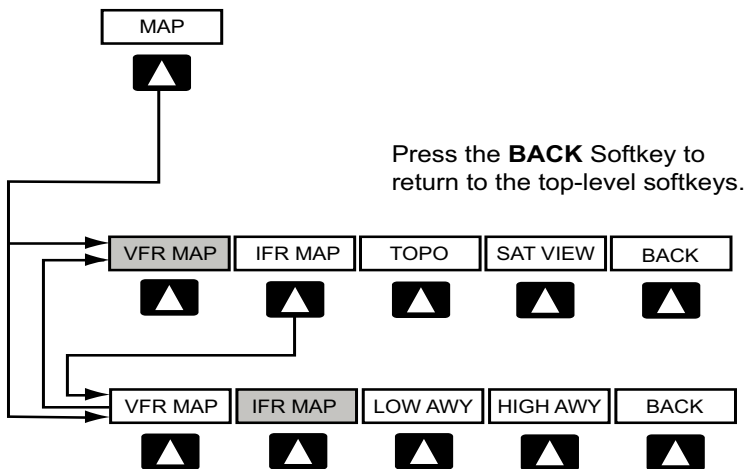


VFR MAP Softkey selected

- IFR MAP Displays IFR map information and softkeys
- TOPO Displays/removes topographical terrain shading
- SAT VIEW Displays/removes satellite imagery (above 20nm scale)
- BACK Returns to top-level softkeys

IFR MAP Softkey selected

- VFR MAP Displays VFR map information and softkeys
- LOW AWY Low Altitude (Victor) Airways displayed
- HIGH AWY High Altitude Airways (Jet Routes) displayed
- BACK Returns to top-level softkeys

WAYPOINT PAGE SOFTKEYS

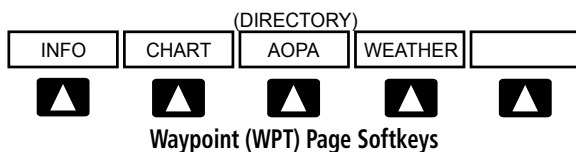

- INFO Displays waypoint information
- CHART Displays chart data (i.e., FliteCharts® or ChartView)
- AOPA or DIRECTORY Displays airport directory information
- WEATHER Displays METAR and TAF text (optional)

WEATHER PAGE SOFTKEYS (GPSMAP 696 ONLY)




- PAN MAP Activates the map pointer for panning the map
- ANIMATE Animates NEXRAD Radar and Satellite Mosaic weather
- INFO Displays SiriusXM® Information
- LEGEND Displays weather legends

SIRIUSXM AUDIO PAGE SOFTKEYS (GPSMAP 696 ONLY)



- INFO Displays SiriusXM Information
- CATEGORY Highlights the Category field
- CHANNEL Highlights the Channels field
- FAVORITE Displays a list of favorite channels
- VOLUME Enables second-level VOLUME softkeys.
Press and hold to toggle Mute on and off.

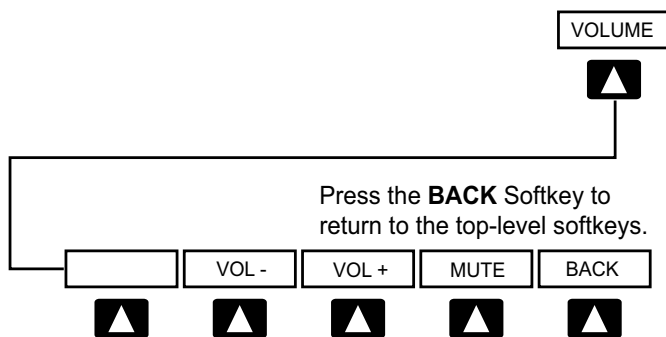

- VOL - Decreases SiriusXM audio volume
- VOL + Increases SiriusXM audio volume
- MUTE Toggles SiriusXM audio on/off
- BACK Returns to top-level softkeys

DATA ENTRY

Using the FMS Joystick to enter data:

- 1) Press the **FMS** Joystick to activate the cursor.
 - 2) Move the **FMS** Joystick to highlight the desired field.
 - 3) Begin entering data.
 - a) To quickly enter a waypoint identifier, turn the **FMS** Joystick counter-clockwise to display a list of recent waypoints (RECENT WPTS), nearest airports (NRST APTS), or flight plan waypoints (FPL WPTS).
 - b) Move the **FMS** Joystick to highlight the desired waypoint from the list and press the **ENT** Key.
- Or:**
- a) Turn the **FMS** Joystick to select a character for the first placeholder. Turning the **FMS** Joystick clockwise scrolls through the alphabet (where appropriate) toward the letter Z, starting in the middle at K (US only), and the digits zero through nine. Turning the **FMS** Joystick counter-clockwise scrolls in the opposite direction.
 - b) Use the **FMS** Joystick to move the cursor to the next placeholder in the field.
 - c) Repeat, turning the **FMS** Joystick to select a character and using the **FMS** Joystick to move the cursor, until the fields are complete.
 - d) Press the **ENT** Key to confirm entry.
- 4) Press the **FMS** Joystick or the **CLR** Key to cancel data entry (the field reverts back to its previous information).

MENUS

Navigating the Page Menu:


- 1) Press the **MENU** Key once to display the Page Menu.
- 2) Turn or move the **FMS** Joystick to scroll through a list of available options (a scroll bar always appears to the right of the window/box when the option list is longer than the window/box).
- 3) Press the **ENT** Key to select the desired option.

- 4) Press the **FMS** Joystick, the **CLR** Key, the **MENU** Key twice to remove the menu and cancel the operation.

Navigating the Main Menu:

- 1) Press the **MENU** Key twice to display the Main Menu.
- 2) Turn or move the **FMS** Joystick to scroll through a list of available options (a scroll bar always appears to the right of the window/box when the option list is longer than the window/box).
- 3) Press the **ENT** Key to select the desired option.
- 4) Press the **FMS** Joystick, the **CLR** Key, the **EXIT** Softkey, or the **MENU** Key to remove the menu and cancel the operation.

PAGES

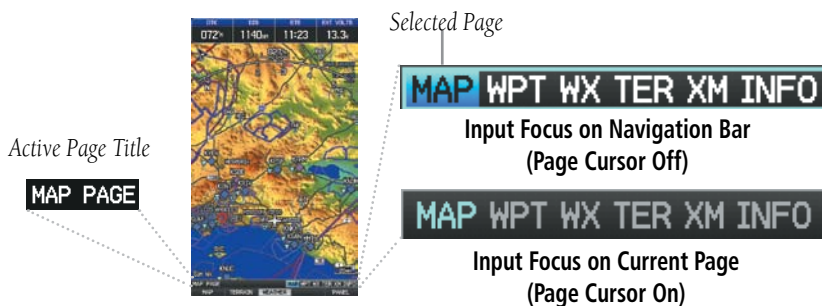

Selecting a Main Page using the FMS Joystick:

- 1) If necessary press the **FMS** Joystick to begin interaction with the Navigation Bar.
- 2) Turn the **FMS** Joystick until the desired page is selected (**MAP**, **WPT**, **WX**, **TER**, **XM**, **INFO**).


Selecting the FPL or NRST Pages:

- 1) Press the **FPL** or the **NRST** Key.
- 2) If necessary, press the **FMS** Joystick to begin interaction with the Navigation Bar.
- 3) Turn the **FMS** Joystick until the desired page is selected.

Blank Page

GPS NAVIGATION

PANEL

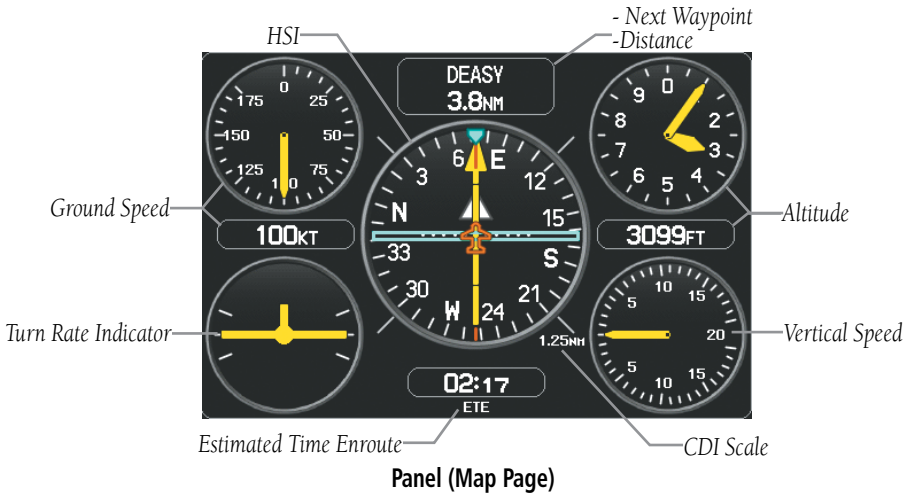

Setting the Bug Indicator:

- 1) From the Map Page, press the **MENU** Key to display the Map Page Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'Set Bug Indicator', and press the **ENT** Key. The 'Set Bug Indicator' Menu appears.
- 3) Turn or move the **FMS** Joystick to highlight the desired menu option, and press the **ENT** Key. For the 'User Selected' option, turn the **FMS** Joystick to select the desired heading reference, and press the **ENT** Key.

Manually setting a course to the destination waypoint:

- 1) From the Map Page, press the **MENU** Key to display the Map Page Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'Set OBS and Hold', and press the **ENT** Key.
- 3) Turn the **FMS** Joystick to select the desired course to the destination, and press the **ENT** Key.

WAYPOINT PAGE

Selecting an airport for review by identifier, facility name, or location:

- 1) From the Waypoint (WPT) Page, press the **INFO** Softkey.
- 2) Press the **FMS** Joystick to activate the cursor.
- 3) Turn the **FMS** Joystick clockwise to begin entering a waypoint identifier (turning it counter-clockwise brings up the waypoint selection submenu - press the **CLR** Key to remove it), or move the **FMS** Joystick to select the facility name, or city field.
- 4) Press the **ENT** Key.

NEAREST PAGES

Viewing nearest information:

- 1) Press the **NRST** Key.
- 2) Turn the **FMS** Joystick to select the desired Nearest Page (APT, WX, VOR, NDB, INT, USR, CTY, ATC, FSS, or ASPC). If none are available, "None Within 200 NM" is displayed.
- 3) Press the **FMS** Joystick to highlight the first selection in the list. Turn or move the **FMS** Joystick to highlight the desired nearest option.
- 4) Press the **ENT** Key to display the associated 'Information Page'. From the Airport Information Page and Weather Information Page, press the **INFO**, **CHART**, **AOPA / DIRECTORY**, or **WEATHER** Softkeys for additional information. From the User Waypoint Information Page, press the **DELETE**, or **EDIT** softkeys to make changes to the selected user waypoint.
- 5) To return to the Nearest Page, press the **FMS** Joystick, the **ENT** Key, or the **CLR** Key.

USER WAYPOINTS

Creating user waypoints:

- 1) To create a user waypoint at the current location, using the Map Pointer, or from the Main Menu:
 - a) To create a user waypoint at the current location, press and hold the **ENT** Key from any page.
 - b) The 'Mark a New User Waypoint?' window appears.

Or:

 - a) Press the **MENU** Key twice to access the Main Menu.
 - b) Move the **FMS** Joystick to highlight 'User Waypoints' and press the **ENT** Key.
 - c) Press the **NEW** Softkey. The message "Create a New User Waypoint?" message is displayed. The current aircraft position is the default location of the new waypoint.

Or:

 - a) From a map page, press the **FMS** Joystick to activate the Map Pointer (on the WX Page, press the **PAN MAP** Softkey or press **Menu**, then 'Show Map Point').
 - b) Find an empty area without any map features and press the **ENT** Key. The message "Create a New User Waypoint?" message is displayed.

Or:

 - a) From a map page, press the **FMS** Joystick to activate the Map Pointer (on the WX Page, press the **PAN MAP** Softkey) ('Create User Waypoint' is not available in the WX Page Menu).
 - b) Select a map feature using the Map Pointer and press the **MENU** Key.
 - c) With 'Create User Waypoint' highlighted, press the **ENT** Key. The message "Create a New User Waypoint?" message is displayed.
- 2) With 'Yes' highlighted, press the **ENT** Key. The New Waypoint Window is displayed.
- 3) Move the **FMS** Joystick to the User Waypoint Name Field and enter the waypoint name, if desired.

- 4) If desired, select the waypoint symbol:
 - a) Move the **FMS** Joystick to highlight the Symbol.
 - b) Turn the **FMS** Joystick to access the 'Select Symbol' Menu.
 - c) Turn or move the **FMS** Joystick to highlight the desired symbol from the menu, and press the **ENT** Key.
- 5) If desired, press the **POSITION** Softkey and enter the latitude, longitude, name, or altitude for the waypoint **or** press the **REF WPTS** Softkey to enter a bearing and distance from another waypoint or the bearing from two other waypoints to define the new waypoint location.
- 6) With 'Done' highlighted, press the **ENT** Key.

DIRECT-TO

Entering a waypoint identifier, facility name, or city as a direct-to destination:

- 1) Press the **Direct-to** Key. The Direct-to Window is displayed (with the active flight plan waypoint as the default selection or a blank waypoint field if no flight plan is active).
- 2) Turn the **FMS** Joystick clockwise to begin entering a waypoint identifier (turning it counter-clockwise brings up the waypoint selection submenu - press the **CLR** Key to remove it), press the **RECENT** Softkey to display a list of recent waypoints, or move the **FMS** Joystick to select the facility name, or city field.
- 3) Press the **ENT** Key.
- 4) With 'Activate' highlighted, press the **ENT** Key.

FLIGHT PLANNING

FLIGHT PLAN CREATION

Creating an active flight plan:

- 1) Press the **FPL** Key.
- 2) Press the **FMS** Joystick to activate the cursor.
- 3) Turn the **FMS** Joystick to display the Insert Waypoint Window. (Turning it clockwise displays a blank Insert Waypoint Window, turning it counter-clockwise displays a list of recent waypoints (RECENT WPTS), nearest airports (NRST APTS), or flight plan waypoints (FPL WPTS)).
- 4) Enter the identifier, facility, or city name of the departure waypoint or select a waypoint from the submenu of waypoints and press the **ENT** Key. The active flight plan is modified as each waypoint is entered.
- 5) Repeat step numbers 3 and 4 to enter each additional flight plan waypoint.
- 6) When all waypoints have been entered, press the **FMS** Joystick to remove the cursor.

FLIGHT PLAN STORAGE

Viewing information about a stored flight plan:

- 1) Press the **FPL** Key.
- 2) Turn the **FMS** Joystick to display the Flight Plan List Page.
- 3) Press the **FMS** Joystick to activate the cursor and turn or move the **FMS** Joystick to highlight the desired flight plan.
- 4) Press the **ENT** Key. The Saved Flight Plan Page is displayed showing departure, destination, total distance, and enroute safe altitude information for the selected Flight Plan.
- 5) Press the **FMS** Joystick or the **DONE** Softkey to exit the Saved Flight Plan Page.

Storing an active flight plan from the Active Flight Plan Page:

- 1) Press the **FPL** Key.
- 2) Turn the **FMS** Joystick to select the Active Flight Plan Page.
- 3) Press the **MENU** Key. The Active Flight Plan Page Menu is displayed.
- 4) Turn or move the **FMS** Joystick to highlight 'Save Flight Plan'.
- 5) Press the **ENT** Key.
- 6) With 'Yes' highlighted, press the **ENT** Key. A copy of the flight plan is stored in the next available position in the flight plan list on the Flight Plan List Page.

FLIGHT PLAN ACTIVATION

Activating a stored flight plan:

- 1) Press the **FPL** Key and turn the **FMS** Joystick to display the Flight Plan List Page.
- 2) Press the **FMS** Joystick to activate the cursor, and turn or move the **FMS** Joystick to highlight the desired flight plan.
- 3) Select the **ACTIVATE** Softkey; or press the **MENU** Key, highlight 'Activate Flight Plan', and press the **ENT** Key.
- 4) With 'Yes' highlighted, select the **ENT** Key. To cancel the request, press the **CLR** Key, the **FMS** Joystick, or highlight 'No' and press the **ENT** Key.

Activating a Flight Plan Leg:

- 1) Press the **FPL** Key.
- 2) Turn the **FMS** Joystick to display the Active Flight Plan Page.
- 3) Press the **FMS** Joystick to activate the cursor and move the **FMS** Joystick to highlight the waypoint leg to be activated.
- 4) Press the **Direct-to** Key twice. The "Activate Leg XXXXX - XXXXX?" window is displayed.
- 5) With 'Yes' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key, the **FMS** Joystick, or highlight 'No' and press the **ENT** Key.

ADJUSTING FUEL FLOW

Adjusting the Active Flight Plan fuel flow:

- 1) Press the **FPL** Key and turn the **FMS** Joystick to display the Active Flight Plan Page.
- 2) Press the **FMS** Joystick to activate the cursor, and move the **FMS** Joystick to highlight the 'Fuel Flow' field.
- 3) Using the **FMS** Joystick, enter the desired fuel flow, and press the **ENT** Key.

INVERTING A FLIGHT PLAN

Inverting the active flight plan:

- 1) Press the **FPL** Key to display the Active Flight Plan Page.
- 2) Press the **MENU** Key, turn or move the **FMS** Joystick to highlight 'Invert Flight Plan', and press the **ENT** Key. An "Invert the Active Flight Plan?" confirmation window is displayed.
- 3) With 'Yes' highlighted, press the **ENT** Key to invert and activate the active flight plan. To cancel, press the **CLR** Key, the **FMS** Joystick, or highlight 'No' and press the **ENT** Key.

SELECTING AN APPROACH

When an approach is selected and activated, it replaces the destination airport with the sequence of waypoints for the selected approach. When an approach is loaded, the destination airport remains in the flight plan and the approach sequence of waypoints are appended to the flight plan. Keep in mind that the airport must have a published approach (GPS, RNAV, VOR, NDB, localizer, or ILS) and only the final course segment (final approach fix to missed approach point) of the published approach is available in the GPSMAP 695/696.

An approach can be selected from the Direct-to Window, Waypoint (WPT) Page, Active Flight Plan Page, and the Saved Flight Plan Page.

Loading an approach from the active or saved flight plan page:

- 1) Press the **FPL** Key.
- 2) Turn the **FMS** Joystick to display the Active Flight Plan Page or Saved Flight Plan Page.

- 3) Press the **SEL APPR** Softkey; or press the **MENU** Key, highlight 'Select Approach' by turning or moving the **FMS** Joystick, and press the **ENT** Key. The Select Approach Window is displayed.
- 4) Turn the **FMS** Joystick to access a list of available approaches. Turn or move the **FMS** Joystick to highlight the desired approach and press the **ENT** Key.
- 5) With 'Load Approach' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key or the **FMS** Joystick.

Activating an approach on the Active Flight Plan Page:

- 1) Press the **FPL** Key.
- 2) Turn the **FMS** Joystick to display the Active Flight Plan Page (if necessary).
- 3) Press the **SEL APPR** Softkey; or press the **MENU** Key, highlight 'Select Approach' by turning or moving the **FMS** Joystick, and press the **ENT** Key. The Select Approach Window is displayed.
- 4) Turn the **FMS** Joystick to access a list of available approaches. Turn or move the **FMS** Joystick to highlight the desired approach and press the **ENT** Key.
- 5) With 'Activate Approach' highlighted, press the **ENT** Key. To cancel the request, press the **CLR** Key or the **FMS** Joystick.

ACTIVATING VECTORS-TO-FINAL

After an approach has been activated, the **VECTORS** Softkey is used when being vectored to the final approach course by Air Traffic Control (ATC).

If the **VECTORS** Softkey is selected, the GPSMAP 695/696 creates an extension of the final course, beyond the final approach waypoint in the database (final approach fix [FAF]). On the Active Flight Plan Page, a Vectors-to-Final symbol appears beside the first approach waypoint.

Cancelling Vectors-to-Final:

From the Active Flight Plan Page (with an approach activated), press the **VECTORS** Softkey.

Or:

- 1) From the Active Flight Plan Page, press the **MENU** Key.
- 2) Turn or move the **FMS** Joystick to highlight 'Cancel Vectors-to-Final' and press the **ENT** Key.

HAZARD AVOIDANCE

SIRIUSXM WEATHER (GPSMAP 696 ONLY)

Viewing SiriusXM Weather products on the Map Page:

- 1) Select the Map Page.
- 2) Select the **WEATHER** Softkey to display the SiriusXM Weather products.
Or:
 - a) Press the **MENU** Key.
 - b) Select 'Show Weather' and press the **ENT** Key.
- 3) Press the **FMS** Joystick to activate the Map Pointer.
- 4) Use the **FMS** Joystick to highlight the desired weather product with the Map Pointer.
- 5) With the desired weather product highlighted, press the **ENT** Key to get detailed information (if available).

Viewing SiriusXM Weather products on the Weather (WX) Page:

- 1) From the WX Page, press the **FMS** Joystick to highlight the weather product field.
- 2) Turn the **FMS** Joystick to select and automatically display the desired weather product.
- 3) If necessary, move the **FMS** Joystick to highlight the type field and turn the **FMS** Joystick to scroll through a list of available options.
- 4) Press the **PAN MAP** Softkey to get abbreviated information about the selected weather product or map feature (if available).
- 5) With the desired weather product selected press the **ENT** Key to get detailed information (if available).

TERRAIN

Enabling/Disabling Terrain Shading on the Map Page:

From the Map Page with the VFR Map displayed, press the **TERRAIN** Softkey.

Or

- 1) From the Map Page, press the **MENU** Key.
- 2) Turn or move the **FMS** Joystick to highlight 'Set Up Map', and press the **ENT** Key.
- 3) Turn the **FMS** Joystick to highlight the 'Map' Category from the horizontal list.
- 4) Move the **FMS** Joystick to highlight the 'Terrain Shading' field.
- 5) Turn the **FMS** Joystick to select 'On' or 'Off', and press the **ENT** Key.

Enabling/Disabling terrain alerts:

From the Terrain Page, press the **DISABLE** Softkey.

Or:

- 1) From the Terrain Page, press the **MENU** Key to access the Page Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'Disable Alerts' or 'Enable Alerts' and press the **ENT** Key.

Setting up the Terrain Page:

- 1) On the Terrain Page, press **MENU** to access the Page Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'Set Up Terrain' and press the **ENT** Key.
- 3) Move the **FMS** Joystick to highlight the desired field.
- 4) Turn the **FMS** Joystick to make changes to the highlighted field.
- 5) With 'Done' highlighted press the **ENT** Key, or press the **CLR** Key to accept the changes and exit the Terrain Setup window.

TRAFFIC INFORMATION SERVICE (TIS)

Setting up and customizing TIS traffic on the map page:

From the Map Page press the **TRAFFIC** Softkey to toggle traffic on/off.

Or:

- 1) From the Map Page press the **MENU** Key.
- 2) Turn or move the **FMS** Joystick to highlight 'Set Up Map' and press the **ENT** Key.
- 3) Turn the **FMS** Joystick to select the 'Map' Category from the horizontal list.
- 4) Move the **FMS** Joystick to highlight the 'TRAFFIC DATA' Field.
- 5) Turn the **FMS** Joystick to access a list of options for each feature (On/Off,).
- 6) Using the **FMS** Joystick select the desired option and press the **ENT** Key.
- 7) Press the **FMS** Joystick, the **CLR** Key, or the **EXIT** Softkey to return to the Map Page with the changed settings.

Adjusting alert volume:

- 1) Press the **MENU** Key twice to access the Main Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'System Setup', and press the **ENT** Key.
- 3) Turn or move the **FMS** Joystick to highlight 'Sound', and press the **ENT** Key.
- 4) Move the **FMS** Joystick to highlight the 'Alert Volume' field.
- 5) Turn the **FMS** Joystick to select the desired volume (0-10).
- 6) Press the **EXIT** Softkey or **FMS** Joystick to exit.

Blank Page

ADDITIONAL FEATURES

SAFETAXI

Enabling/disabling SafeTaxi:

- 1) With the Map Page displayed, press the **MENU** Key. The Map Page Menu is displayed.
- 2) Turn or move the **FMS** Joystick to highlight 'Set Up Map' and press the **ENT** Key.
- 3) Turn the **FMS** Joystick to highlight the 'Airport' Category from the horizontal list.
- 4) Move the **FMS** Joystick to highlight the 'Safe Taxi' Field.
- 5) Turn the **FMS** Joystick to access the menu options.
- 6) Turn or move the **FMS** Joystick to select 'On' or 'Off', and press the **ENT** Key.

CHARTVIEW (OPTIONAL)

Displaying ChartView:

- 1) With the Waypoint (WPT) Page displayed, press the **CHART** Softkey.
- 2) Press the **FMS** Joystick to activate the cursor.
- 3) Move the **FMS** Joystick to highlight the Airport Identifier Field and use the **FMS** Joystick to begin entering the desired airport.
Or:
 - a) Move the **FMS** Joystick to highlight the Chart Field.
 - b) Turn the **FMS** Joystick to access a drop-down menu of available charts.
 - c) Turn or move the **FMS** Joystick to select the desired chart, and press the **ENT** Key.**Or:**
 - 1) From the Active Flight Plan Page (with a waypoint entered), press the **SEL APPR** Softkey. The Select Approach Window is displayed.

- 2) Press the **MENU** Key.
- 3) Turn or move the **FMS** Joystick to select 'Show Chart', and press the **ENT** Key. The selected chart is displayed.
- 4) Press the **EXIT** Softkey to return to the previous page.

Or:

- 1) From the Map Page or Active Flight Plan Page, use the Map Pointer to highlight the desired airport and press the **ENT** Key. The Airport Information Window is displayed.
- 2) Press the **CHART** Softkey.
- 3) Press the **FMS** Joystick to activate the cursor.
- 4) Turn the **FMS** Joystick to access a drop-down menu of available charts.
- 5) Turn or move the **FMS** Joystick to select the desired chart, and press the **ENT** Key.

FLITECHARTS

Displaying FliteCharts:

- 1) With the Waypoint (WPT) Page displayed, press the **CHART** Softkey.
- 2) Press the **FMS** Joystick to activate the cursor.
- 3) Move the **FMS** Joystick to highlight the Airport Identifier Field and use the **FMS** Joystick to begin entering the desired airport.

Or:

- a) Move the **FMS** Joystick to highlight the Chart Field.
- b) Turn the **FMS** Joystick to access a drop-down menu of available charts.
- c) Turn or move the **FMS** Joystick to select the desired chart, and press the **ENT** Key.

Or:

- 1) From the Active Flight Plan Page (with a waypoint entered), press the **SEL APPR** Softkey. The Select Approach Window is displayed.
- 2) Turn or move the **FMS** Joystick to select 'Show Chart', and press the **ENT** Key. The selected chart is displayed.
- 3) Press the **EXIT** Softkey to return to the previous page.

Or:

- 1) From the Map Page or Active Flight Plan Page, use the Map Pointer to highlight the desired airport and press the **ENT** Key. The Airport Information Window is displayed.
- 2) Press the **CHART** Softkey.
- 3) Press the **FMS** Joystick to activate the cursor.
- 4) Turn the **FMS** Joystick to access a drop-down menu of available charts.
- 5) Turn or move the **FMS** Joystick to select the desired chart, and press the **ENT** Key.

AIRPORT DIRECTORY DATA

Viewing Airport Directory information:

From the Waypoint (WPT) Page, press the **AOPA** or **DIRECTORY** Softkey.

Or:

- 1) From any map highlight an airport using the Map Pointer, and press the **ENT** Key. The Airport Information Window is displayed.
- 2) Press the **AOPA** or **DIRECTORY** Softkey.
- 3) To return to the map, press the **ENT** Key, the **CLR** Key, or the **FMS** Joystick.

Overview

GPS Navigation

Flight Planning

Hazard Avoidance

Additional Features

Messages & Alerts

Utilities

Blank Page

MESSAGES & ALERTS

SYSTEM MESSAGES

Message	Comments
Antenna Shorted to Ground	The external GPS antenna has an electrical connection problem. Contact Garmin Product Support.
Approaching Target Altitude	Within 1,000 feet of final VNAV target altitude.
Approaching VNAV Profile	The aircraft is within one minute of reaching the initial VNAV decent point.
Arriving at XXX	The aircraft is nearing the destination.
Battery Low	The battery needs to be recharged.
Can't Unlock Maps	No applicable unlock code for one or more maps was found. All MapSource maps are not accessible.
Check XM Antenna	Internal problem with your GXM 40 antenna. Contact Garmin Product Support.
Database Error	Internal problem with the unit. Contact your dealer or Garmin Product Support to have the unit repaired.
Fuel Tank	A reminder for switching fuel tanks. The reminder message repeats at the specified interval after the beginning of each trip.
Lost Satellite Reception	The unit is unable to receive satellite signals.
Memory Full	Unit memory is full, no further data can be saved.
Near Proximity Point	You have reached the distance set for a proximity waypoint.
Next DTK XXX	The aircraft is nearing a turn in a route.
No XM Signal	The GXM 40 antenna is not receiving a SiriusXM signal.

Message	Comments
Proximity Memory Full	No additional proximity waypoints can be saved.
Proximity Radius Overlaps	The radii of two proximity waypoints overlap.
Route Already Exists	A route with the same name already exists.
Route Memory Full	No additional routes can be saved.
Route Truncated	Uploaded route from another device has more than 300 waypoints.
Route Waypoint Memory Full	No additional route waypoints can be saved.
Saving XM Program Information	A SiriusXM Radio channel lineup change has occurred and the unit is saving the channel lineup to memory.
Steep Turn	Approaching a turn that requires a bank angle in excess of 25 degrees to stay on course.
Track Already Exists	A saved track with the same name already exists.
Track Log Full	The track log is full and track recording was turned off. To record more track points, you need to clear the track log and turn track recording on.
Track Memory Full	No more track data can be stored. Delete the old track data to store the new data.
Track Truncated	A complete uploaded track will not fit in memory. The oldest track log points have been deleted.
Transfer Complete	Data Transfer was completed.
VNAV Cancelled	VNAV function has been cancelled due to a change in the active route.
Waypoint Already Exists	A waypoint with the same name already exists.
Waypoint Memory Full	The unit has stored the maximum number of waypoints.
XM Antenna Not Responding	The unit is unable to communicate with the GXM 40.

AIRSPACE MESSAGES

Message	Comments
Inside Airspace	Inside the boundaries of the airspace.
Airspace Near and Ahead	Within two nautical miles of an airspace and your current course takes you inside the airspace.
Airspace Ahead, Within 10 Minutes	The projected course takes you inside an airspace within the next 10 minutes or less.
Airspace Near, Within 2 nm	Within two nautical miles of an airspace but not projected to enter it.

AURAL ALERTS

TRAFFIC

- “Traffic”—TIS traffic alert received.
- “Traffic Not Available”—TIS service is not available or out of range.

TERRAIN

- “Five Hundred”—when the aircraft descends through 500 feet above the destination airport.

The following aural terrain alerts are issued when flight conditions meet parameters that are set within the software algorithms, and are dependant on the sensitivity level set in the Terrain Setup Menu.

Alert Severity	Terrain	Obstacle	Descent Rate
Caution	“caution, terrain” “caution, terrain ahead”	“caution, obstacle” “caution, obstacle ahead”	“caution, sink rate”
Warning	“terrain ahead! pull up!” “terrain! terrain! pull up! pull up!”	“obstacle ahead! pull up!” “obstacle! obstacle! pull up! pull up!”	“sink rate, pull up!” “pull up!”

Aural Alerts

Blank Page

UTILITIES

FLIGHT LOG

Viewing details for a flight:

- 1) Press the **MENU** Key twice to display the Main Menu.
- 2) Turn or move the **FMS** Joystick to select 'Flight Log', and press the **ENT** Key. (Hours and minutes can be displayed by pressing the **MENU** Key and selecting 'Show Hours and Minutes').
- 3) Turn or move the **FMS** Joystick to select the desired flight from the list, and press the **ENT** Key. Route, date, hours, distance, and actual flight path is displayed.
- 4) With 'Done' selected, press the **ENT** Key to return to the previous page.

TRACK LOG

Displaying/removing the track log on the Map Page:

- 1) From the Map Page, press the **MENU** Key. The Map Page Menu is displayed.
- 2) Turn or move the **FMS** Joystick to select 'Set Up Map' from the Map Page Menu, and press the **ENT** Key.
- 3) Turn the **FMS** Joystick to highlight the 'Line' options from the horizontal list.
- 4) Move the **FMS** Joystick to highlight the 'Track Log' field.
- 5) Turn the **FMS** Joystick to select 'On' or 'Off', and press the **ENT** Key.
- 6) Press the **FMS** Joystick, the **CLR** Key, or the **EXIT** Softkey to return to the Map Page.

E6B CALCULATOR

Calculating true airspeed and density altitude:

- 1) From the E6B Calculator Page, enter the altitude shown on the altimeter into the 'Indicated Altitude' field, and press the **ENT** Key.
- 2) Repeat for 'Calibrated Airspeed', 'Baro Pressure', and 'Total Air Temperature' fields. (For Calibrated Airspeed, use the speed shown on the airspeed indicator. Use the current altimeter setting for Baro Pressure. Total Air Temperature is the temperature of the outside air including the heating effect caused by speed. For most aircraft, this is the temperature reading on a standard outside air temperature gauge.) The calculated figures for True Airspeed and Density Altitude are shown in the designated fields.

Calculating winds aloft:

- 1) Calculate or enter the true airspeed into the 'True Airspeed' field, and press the **ENT** Key.
- 2) Enter the aircraft heading shown on the directional gyro or compass into the 'Heading' field, and press the **ENT** Key. Head/Tail Wind, Wind From, and Wind Speed are calculated.

AIRCRAFT PROFILE

Entering an aircraft profile:

- 1) From the Aircraft Profile Page, press the **NEW** Softkey. The cursor is activated in the 'Current Aircraft' field.
- 2) Enter the desired aircraft name, and press the **ENT** Key.
- 3) Move the **FMS** Joystick to the 'Cruise Speed' field, turn the **FMS** Joystick to enter the appropriate cruise speed, and press the **ENT** Key. Repeat for the 'Maximum Speed' and 'Fuel Flow' fields.
- 4) Move the **FMS** Joystick to highlight the 'Map Symbol' field, and turn the **FMS** Joystick to select the desired map symbol.

WEIGHT & BALANCE

Performing weight and balance calculations:

- 1) Press the **MENU** Key twice to open the Main Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'Weight & Balance', and press the **ENT** Key.
- 3) Select the desired aircraft from the 'Current Aircraft' field.
- 4) Use the **FMS** Joystick to enter the desired weights and arms (or "stations"), pressing the **ENT** Key after each entry. The calculated moment, weight, and CG figures appear at the bottom of the page. Keep in mind that the "Aircraft" (empty weight/arm) figures must be entered as a reference to calculate a valid moment, weight, and CG.
- 5) To empty the aircraft, press the Menu Key and select 'Empty Aircraft', or press the **EMPTY** Softkey.

PROXIMITY WAYPOINTS

Defining proximity waypoints:

- 1) Press the **MENU** Key twice to open the Main Menu.
- 2) Turn or move the **FMS** Joystick to highlight 'User Waypoints', and press the **ENT** Key.
- 3) Press the **PROXIMITY** Softkey. The Proximity Waypoints Page is displayed.
- 4) Press the **NEW** Softkey. The New Proximity Waypoint Window is displayed.
- 5) Select 'Use Map' or 'Use Identifier', and press the **ENT** Key.
- 6) Select the desired waypoint using the Map or Select Waypoint Window, and press the **ENT** Key. The 'Distance' field is highlighted.
- 7) Using the **FMS** Joystick, enter the desired distance and press the **ENT** Key.

Blank Page



Garmin International, Inc.
1200 East 151st Street
Olathe, KS 66062, U.S.A.
p: 913.397.8200
f: 913.397.8282

Garmin AT, Inc.
2345 Turner Road SE
Salem, OR 97302, U.S.A.
p: 503.391.3411
f: 503.364.2138

Garmin (Europe) Ltd
Liberty House, Bulls Copse Road
Hounslow Business Park
Southampton, SO40 9RB, U.K.
p: 44/0870.8501241
f: 44/0870.8501251

Garmin Corporation
No. 68, Jangshu 2nd Road
Shijr, Taipei County, Taiwan
p: 886/2.2642.9199
f: 886/2.2642.9099

www.garmin.com